










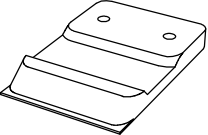
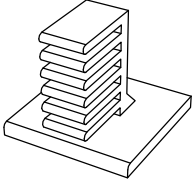




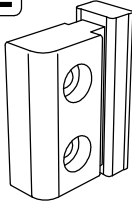

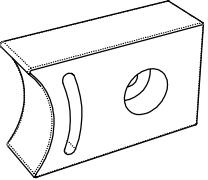

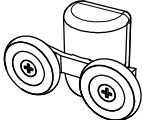

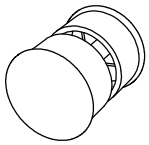
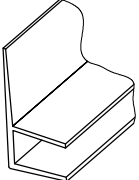



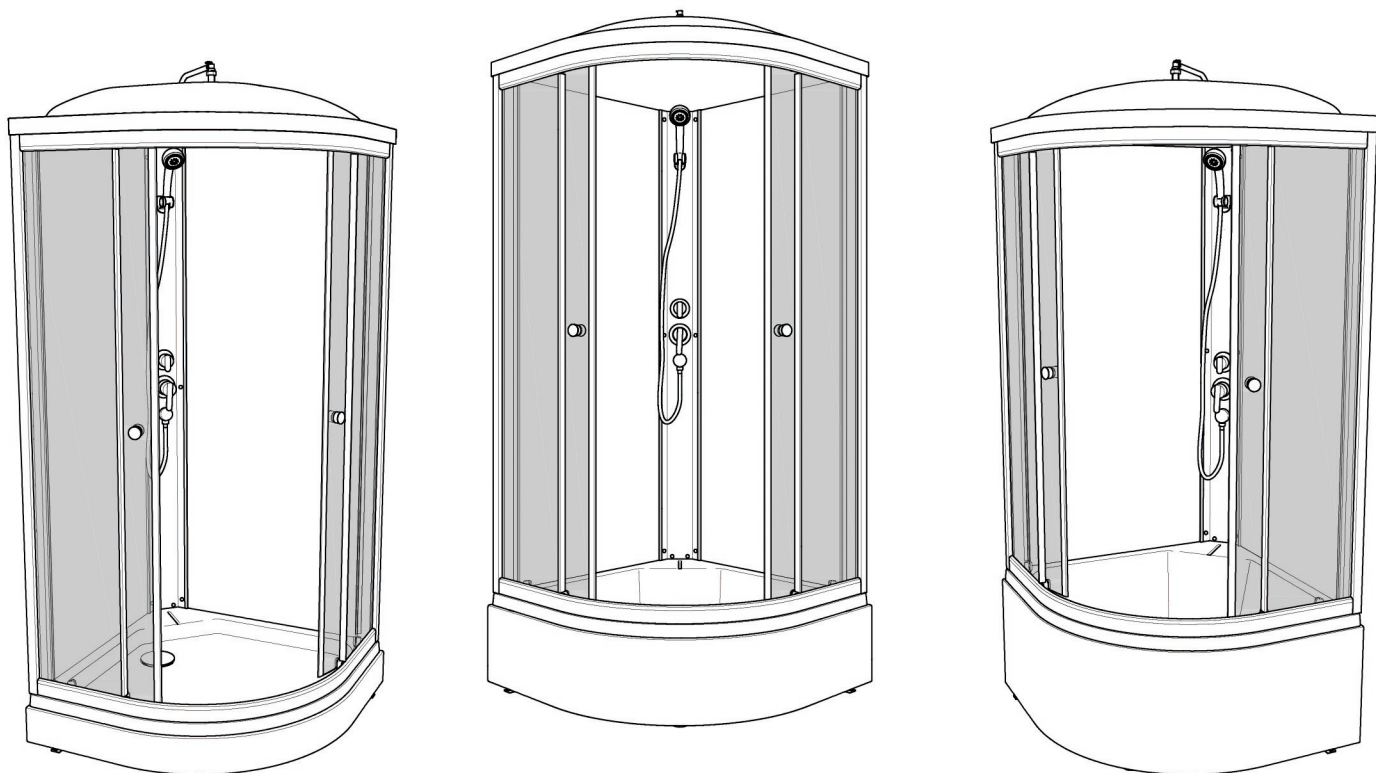






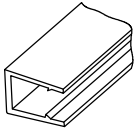
Инструкция по сборке душевой кабины

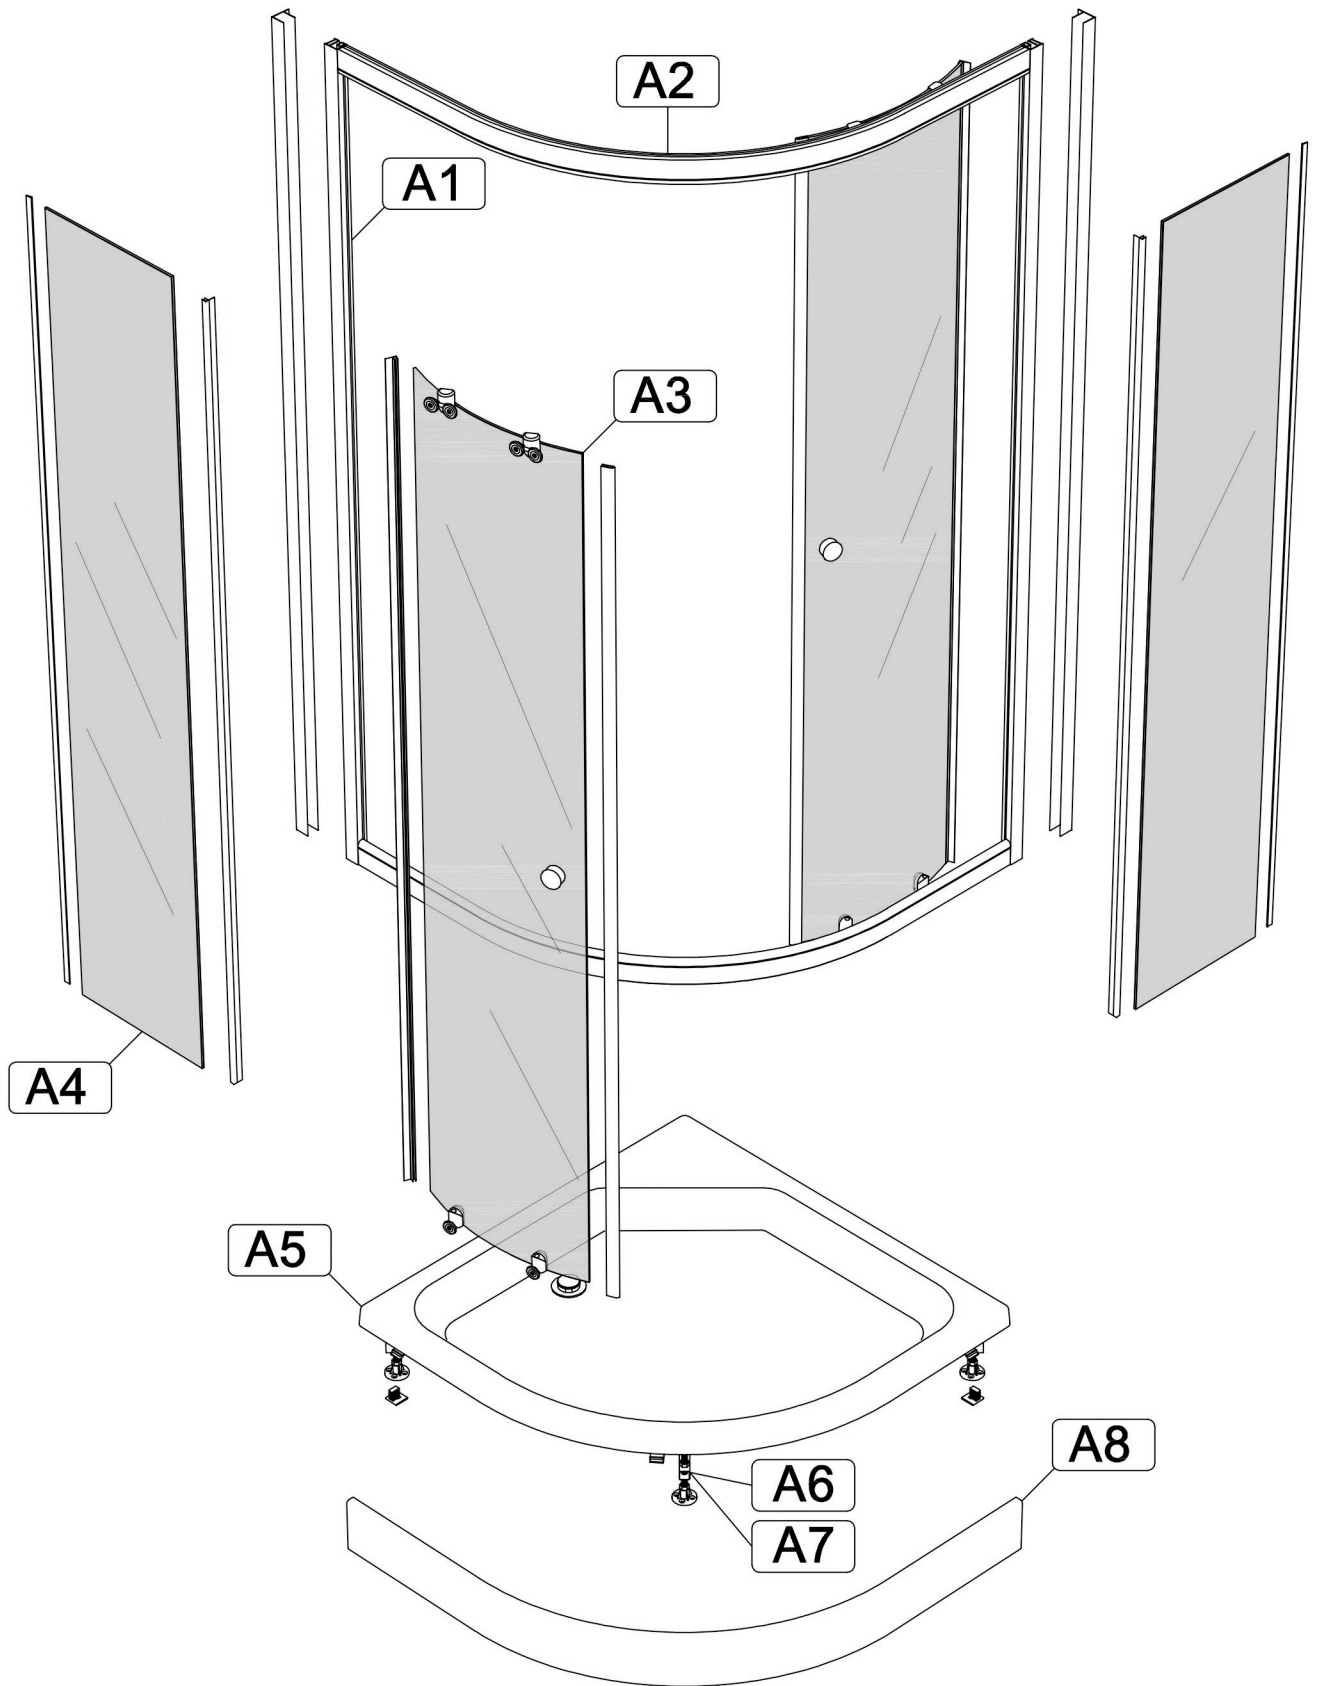
СТАНДАРТ / УЛЬТРА

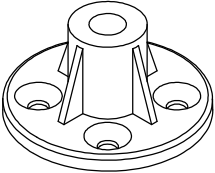
НИЗКИЙ/СРЕДНИЙ/ ВЫСОКИЙ ПОДДОН



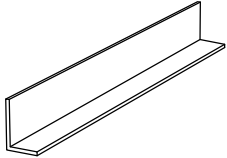


B1 	B2 M10 	B3 	B7  L=70MM	B8 
B4 	B5 	B6 3.5x16 		
B9 3.5x12 	B10 3.5x35 	B11 3.5x19 	B12 	B13 
B14 	B15 	B16 	B17 	B18 
B19 	B20 	B21 	B22 	B23 
B24 	B25 	B26 M4x20 	B27 M4 	B28 
B29 	B30 			


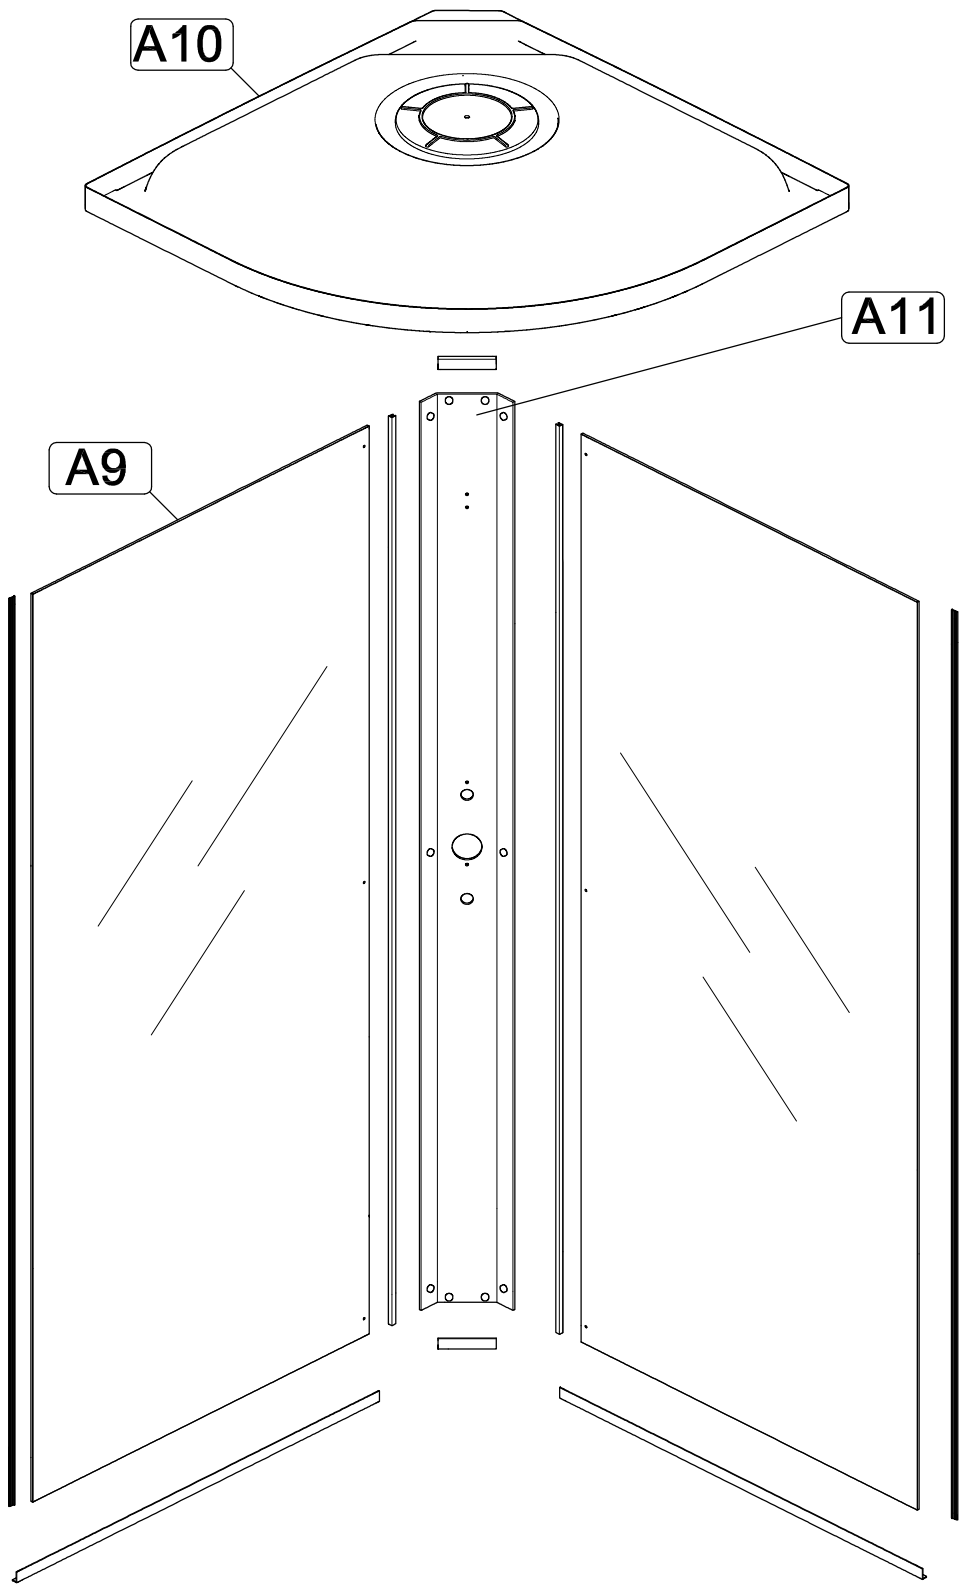


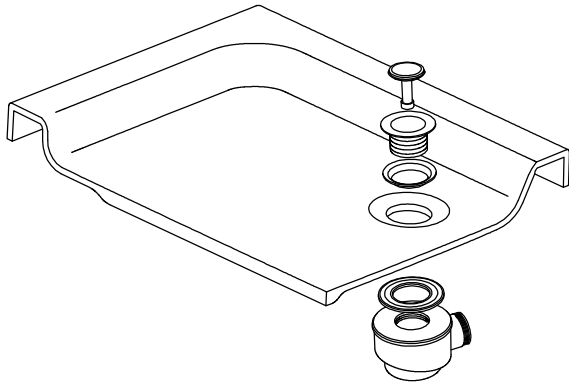



- B1**
- B2**
- B8**

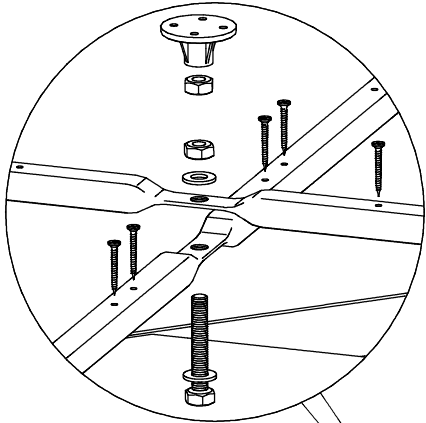




- A6**
- A7**
- B1**
- B2**
- B3**
- B7**
- B10**

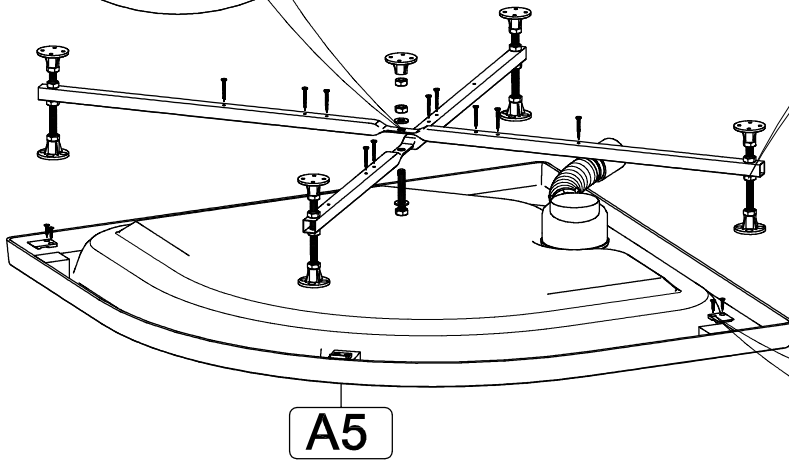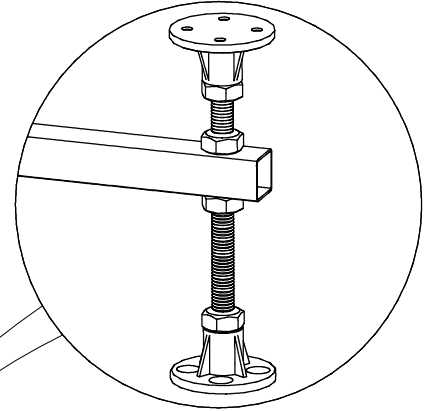



- B4**
- B11**

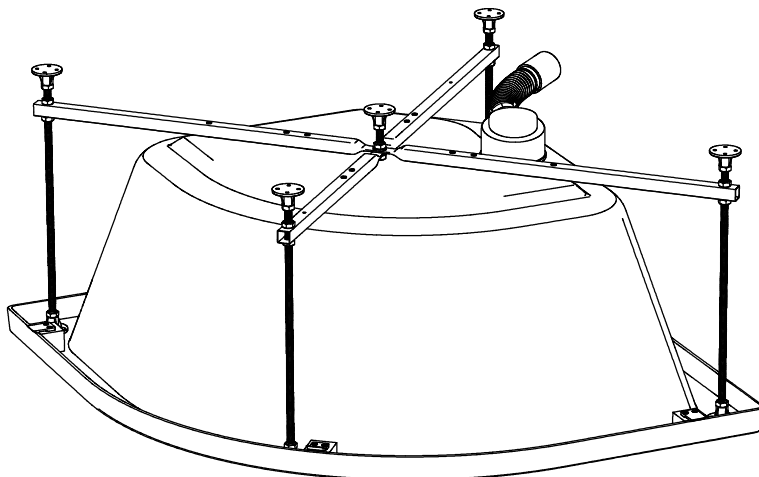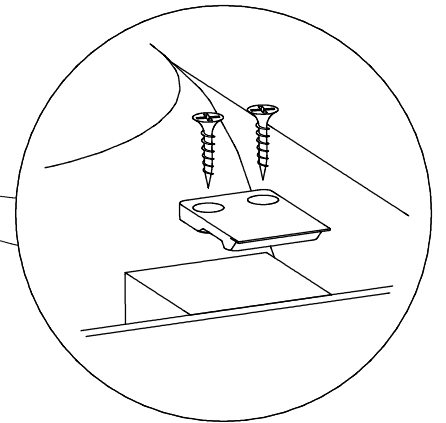


Добор и крепление к стене
в комплект
не входит

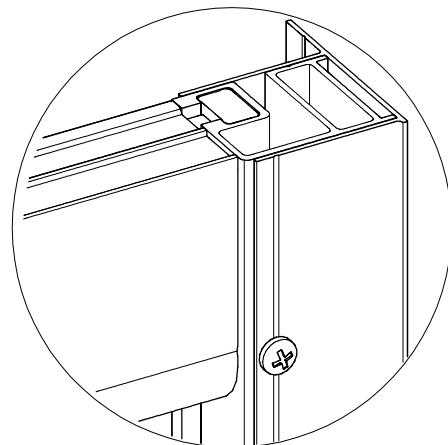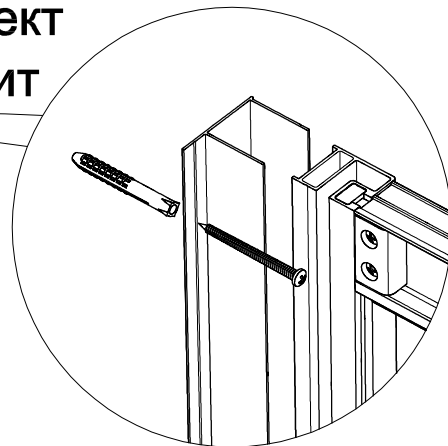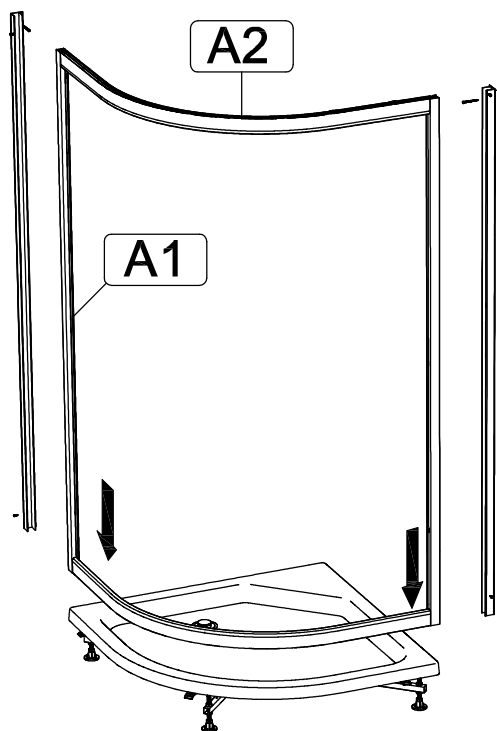


B6
B12

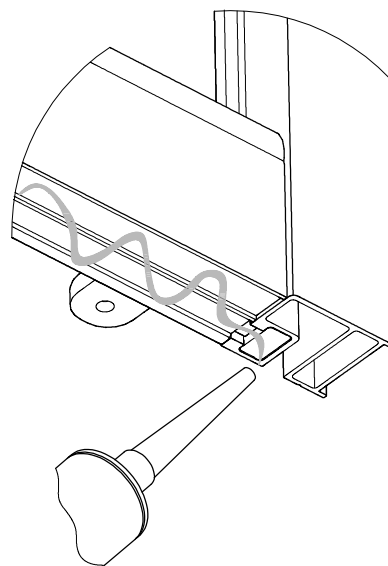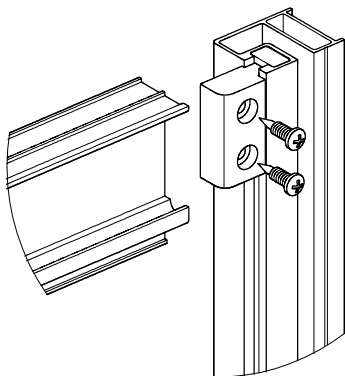


Нейтральный силиконовый
герметик

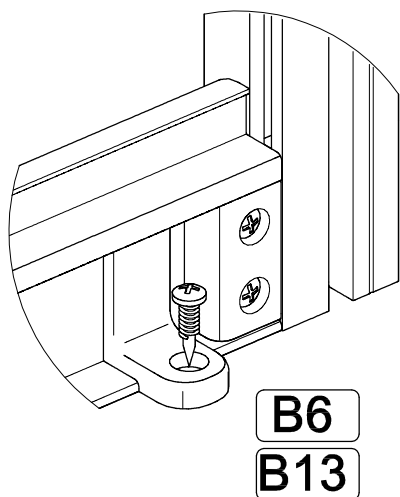


B6
B13

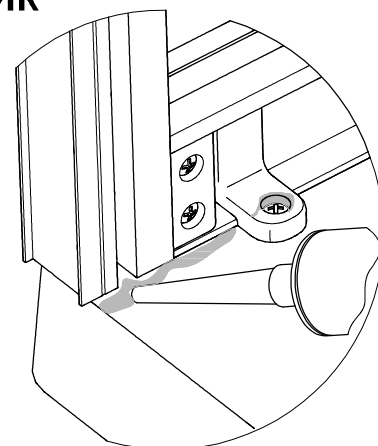

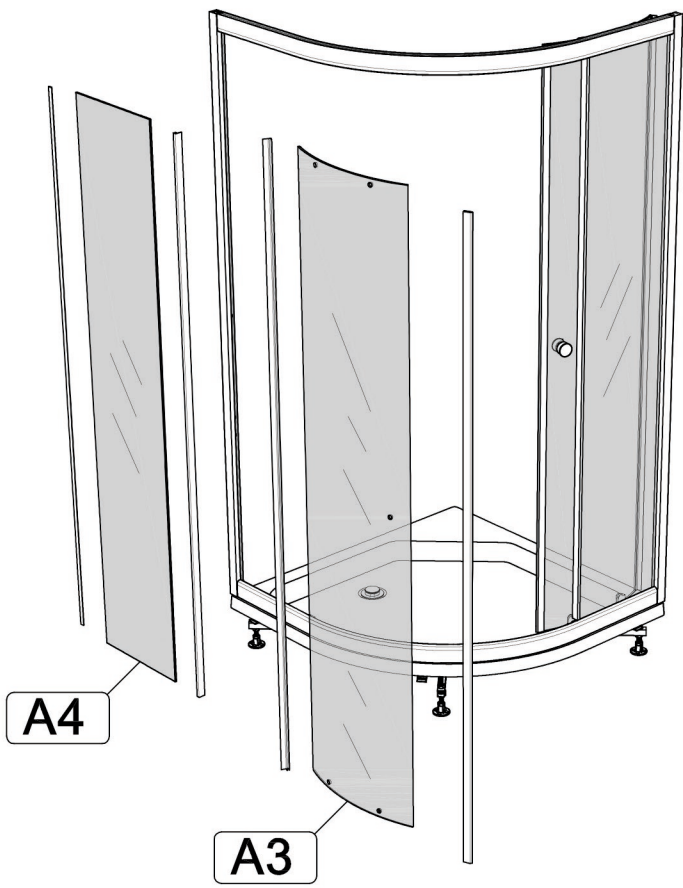


B9
B14

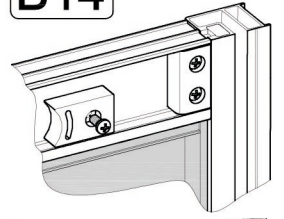

B21 ✂


B19 ✂

B9
B15

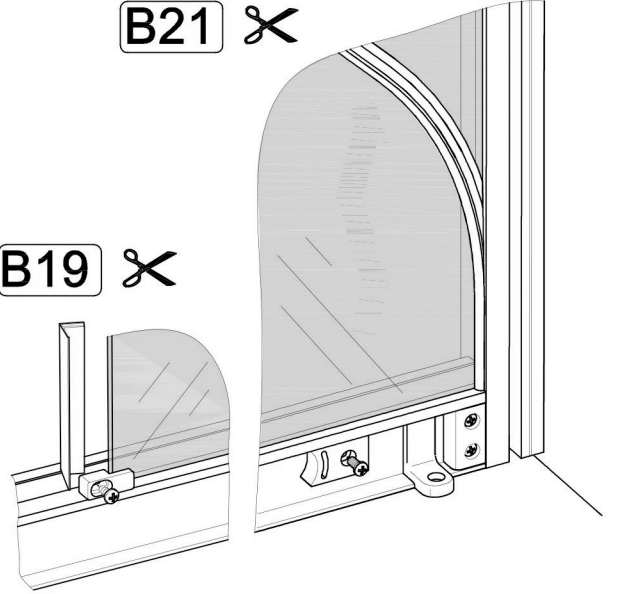


B19 ✂

B16

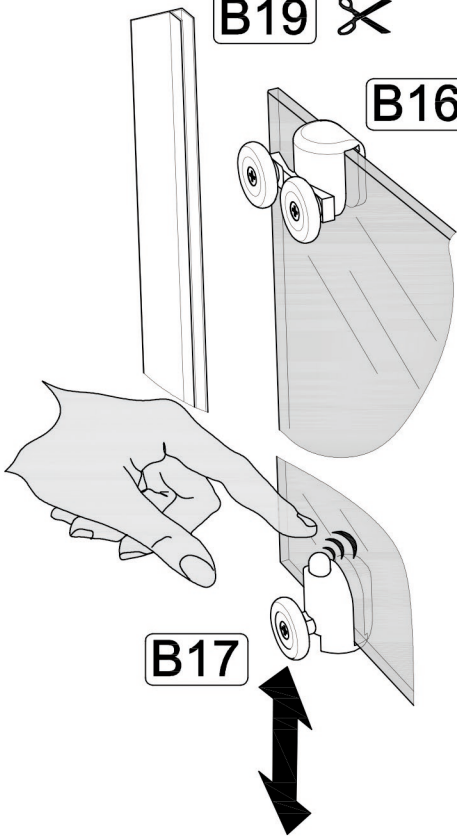





B20

A4
B18

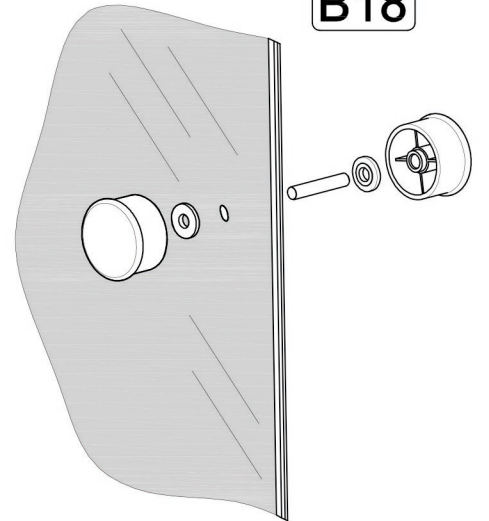



B9 = = B9
B14 B14

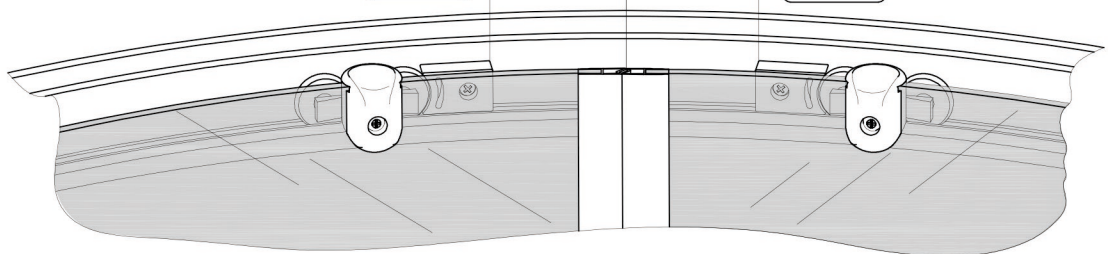

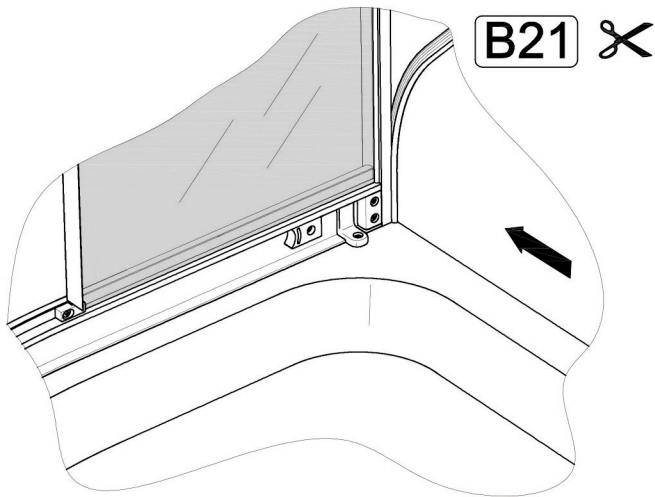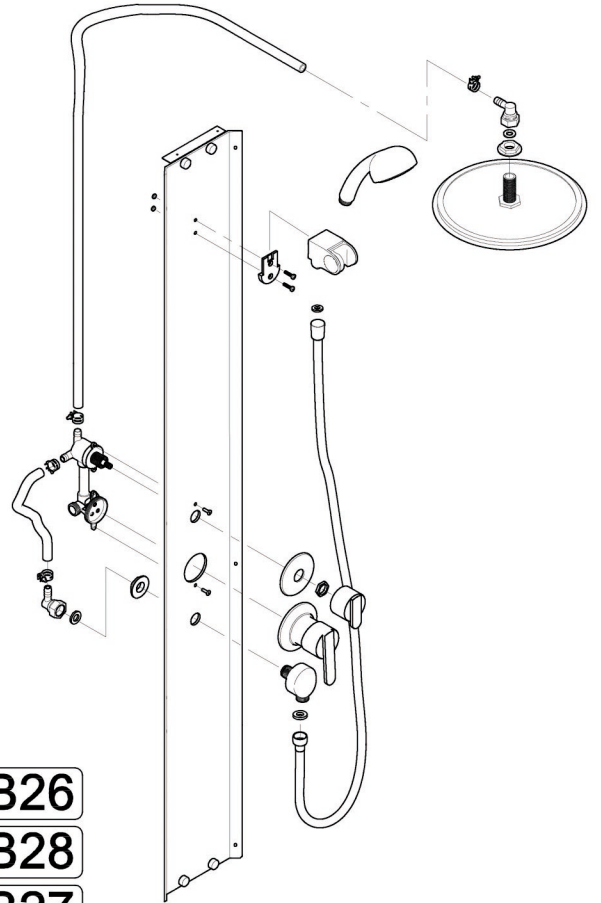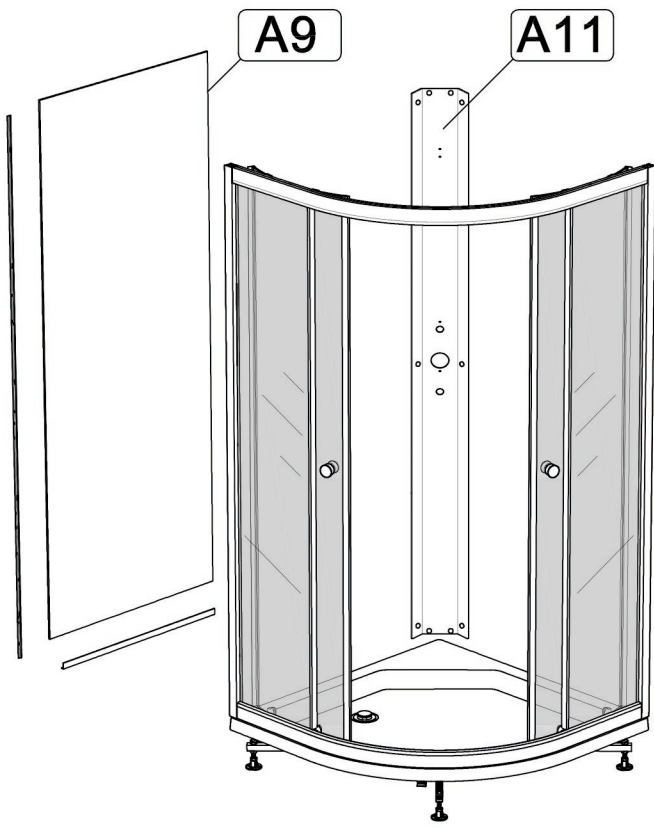


- | | |
|-----|-----|
| B24 | B26 |
| B25 | B28 |
| B29 | B27 |

- | | |
|-----|-----|
| B24 | B6 |
| B25 | B23 |

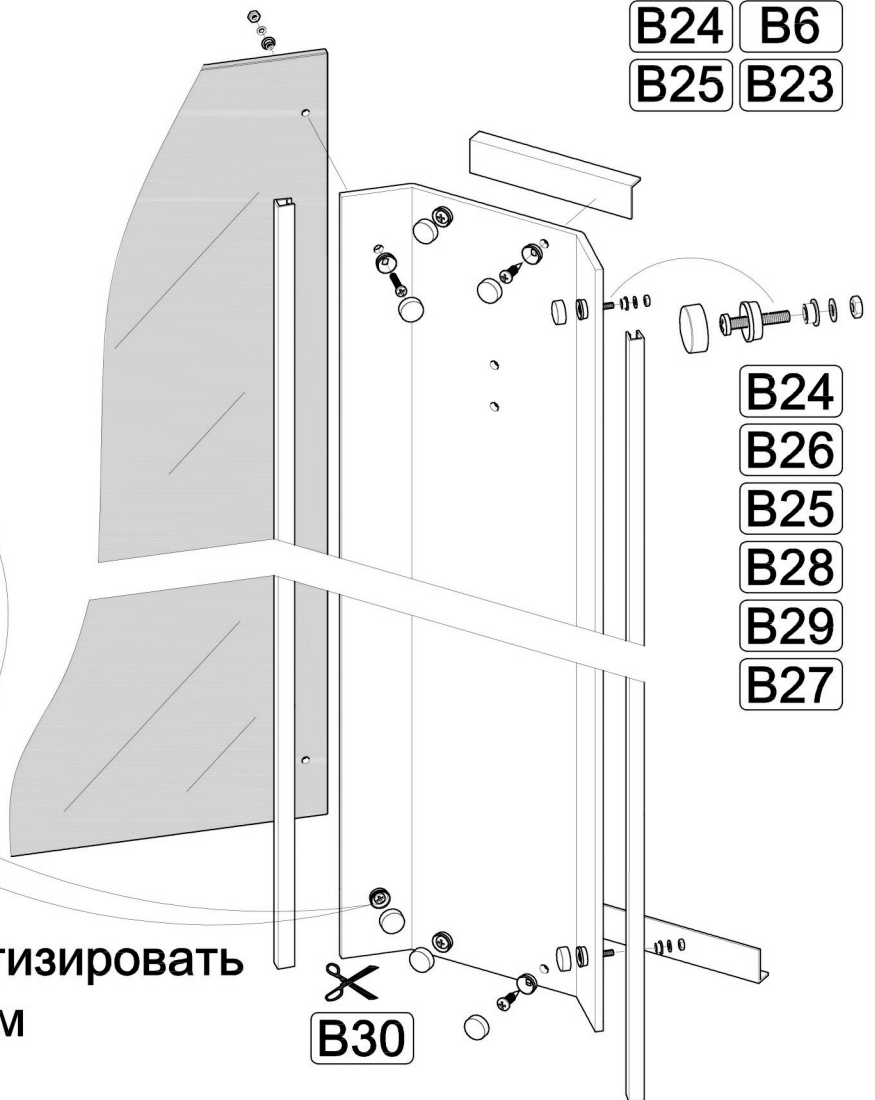
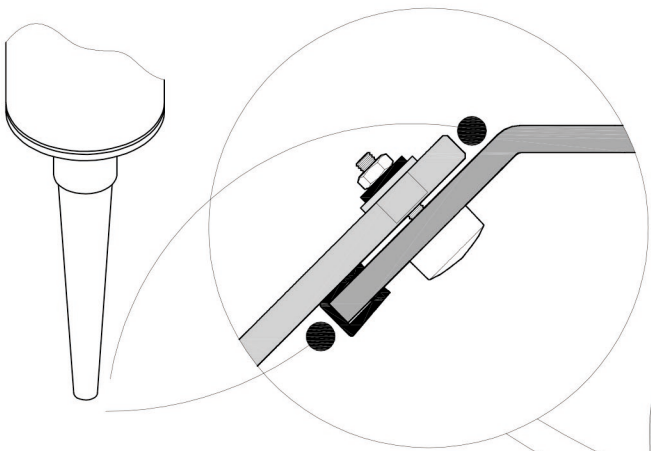


Место примыкания герметизировать нейтральным силиконовым герметиком

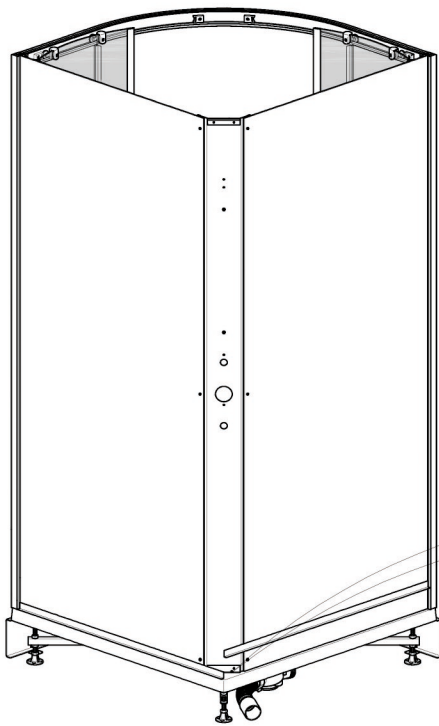



B6
B22

B6

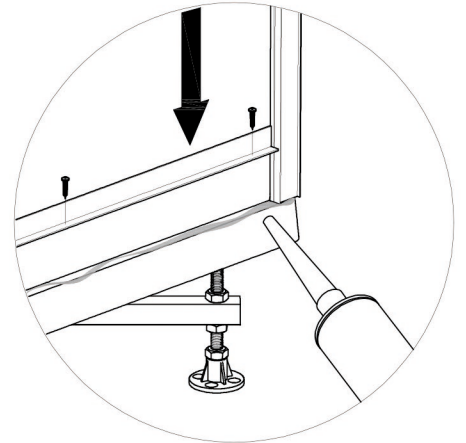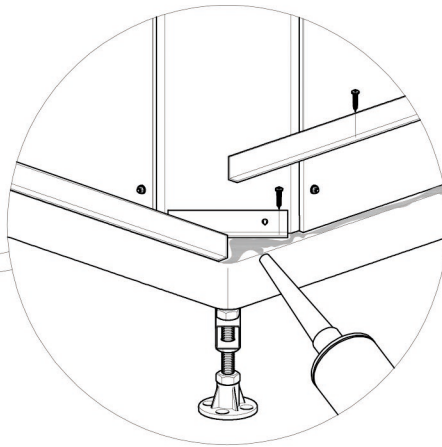


Нейтральный силиконовый герметик


B6

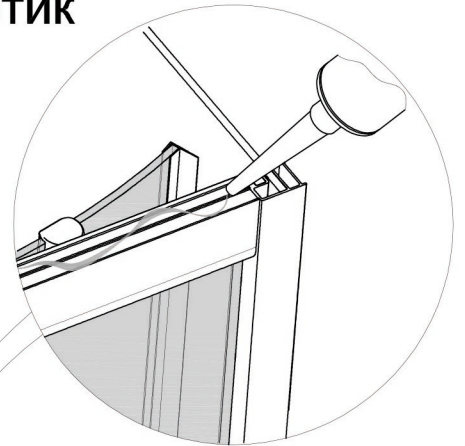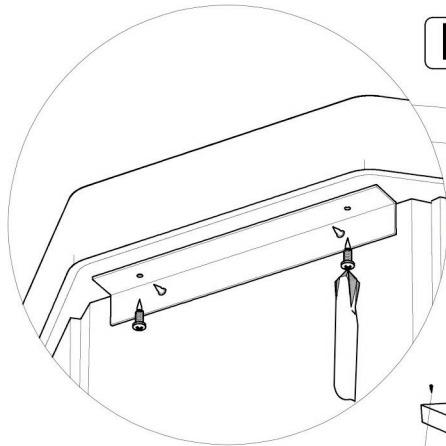

B9

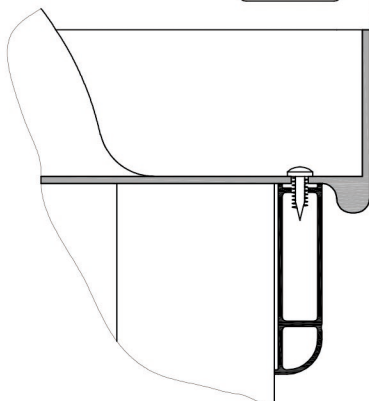

A8
B5

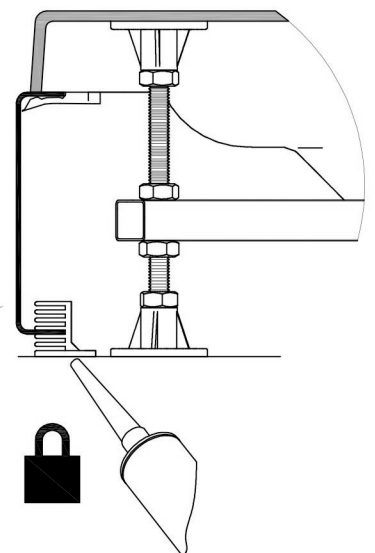

www.3tn.ru

Достоверную информацию уточняйте на santehnica.ru.