

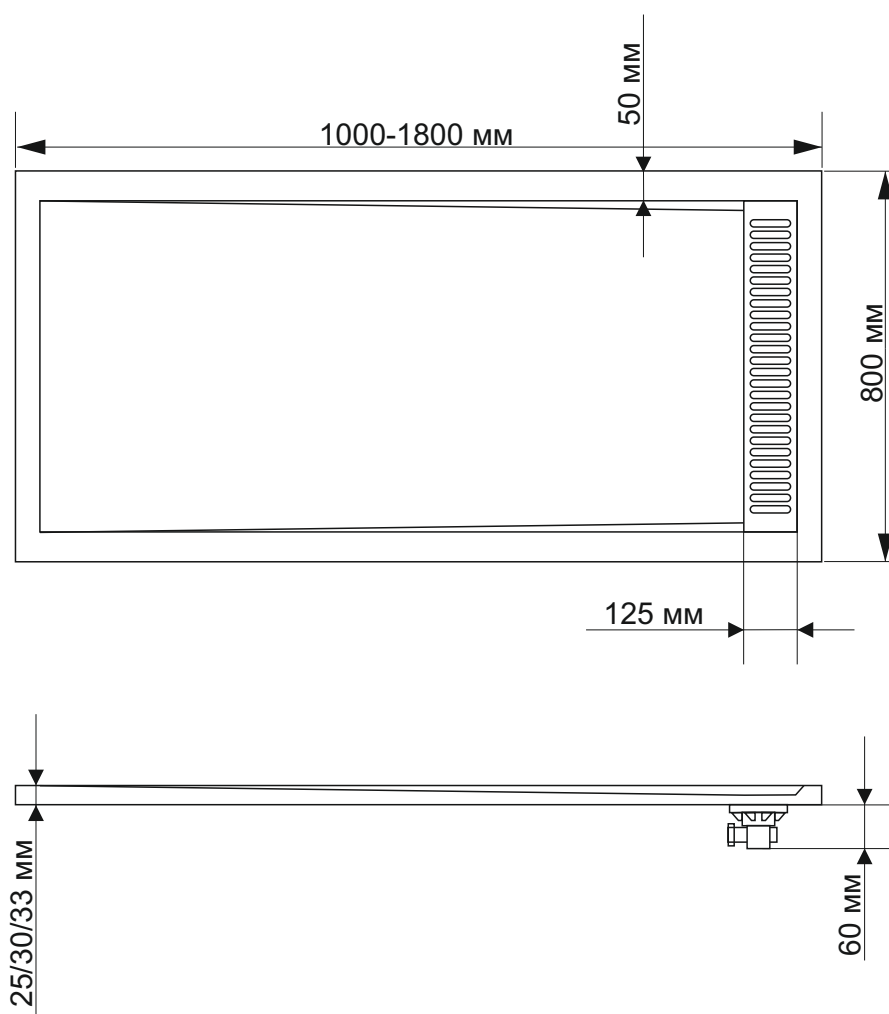
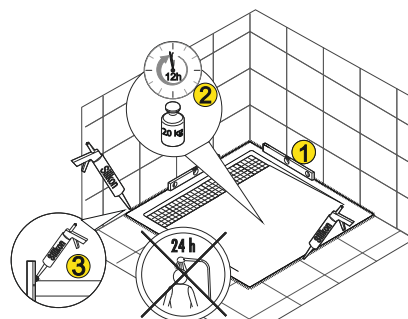
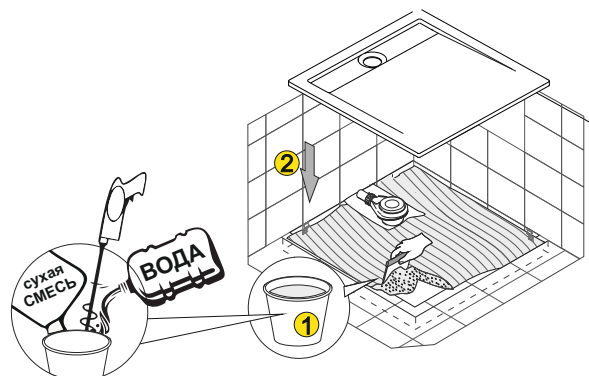
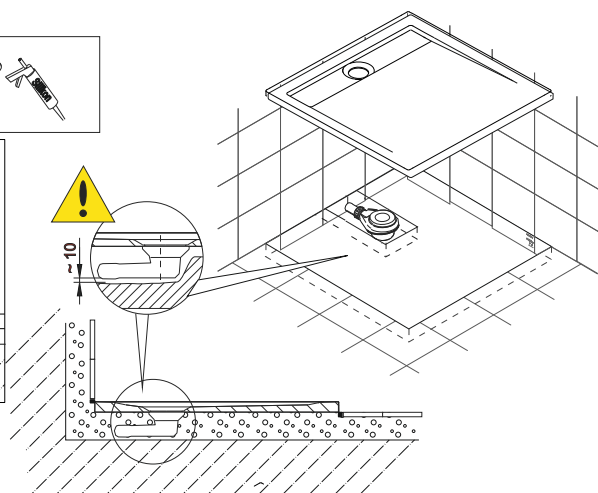

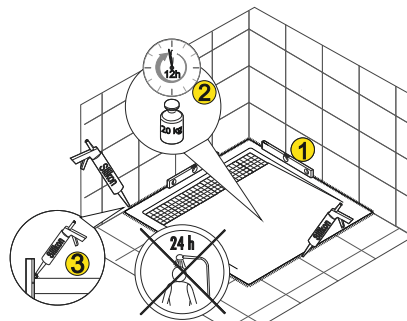
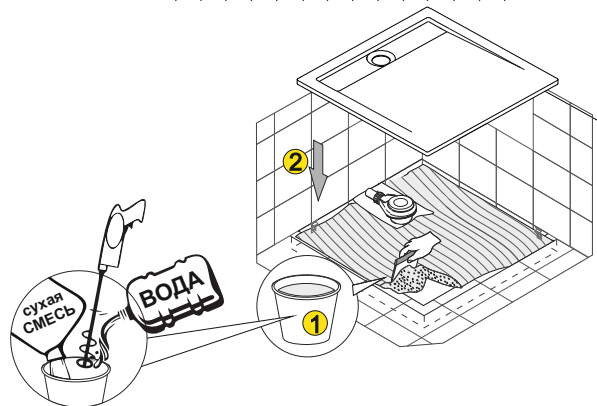


# Инструкция по установке ПОДДОНОВ ИЗ ИСКУССТВЕННОГО КАМНЯ серии **RGW Stone Tray STM**

Серия Stone Tray  
Искусственный камень

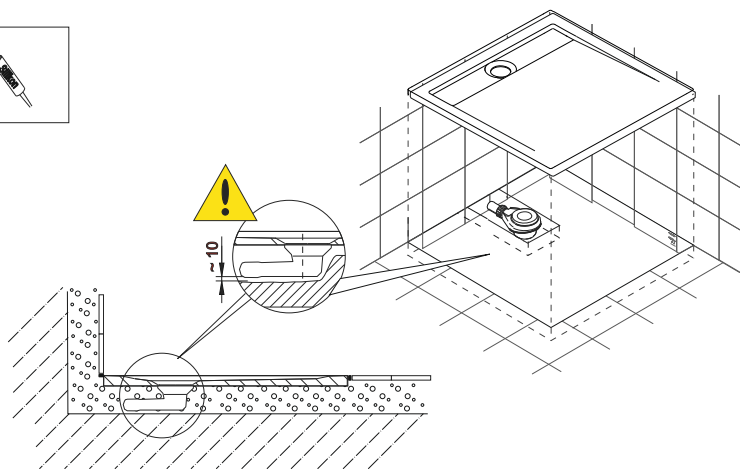

Артикул	Модель	Размеры (АхВ), мм	Высота	Глубина	φ сифона	Цвет
14202810-02 / 14202810-01	RGW STM-108	800x1000	25	15	90	Графит
14202811-02 / 14202811-01	RGW STM-118	800x1100	25	15	90	Белый
14202812-02 / 14202812-01	RGW STM-128	800x1200	25	15	90	Мрамор
14202813-02 / 14202813-01	RGW STM-138	800x1300	30	15	90	Графит
14202814-02 / 14202814-01	RGW STM-148	800x1400	30	15	90	Белый
14202815-02 / 14202815-01	RGW STM-158	800x1500	30	15	90	Мрамор
14202816-02 / 14202816-01	RGW STM-168	800x1600	30	15	90	Графит
14202817-02 / 14202817-01	RGW STM-178	800x1700	33	15	90	Белый
14202818-02 / 14202818-01	RGW STM-188	800x1800	33	15	90	Мрамор



Достоверную информацию уточняйте на [santehnica.ru](http://santehnica.ru).